

# UN38.3 测试报告

## UN38.3 Test Report

报告编号  
Report No. RHDTL260326023

样品名称及型号  
移动电源 PBMGS225

Sample Name  
&Model Power Bank PBMGS225




委托单位  
东莞市质尚品电子科技有限公司

Consignor  
Dongguan IQPower Electronics Co., Ltd.

东莞市鸿鼎储能检测技术有限公司  
Dongguan HDTL Technology Co., Ltd.



地址: 广东省东莞市东城街道金中路5号1栋101室 邮政编码: 523121  
电话: 15015165612 E-mail: official@hdtl-lab.com 网址/Website: <https://www.hdtl-lab.com/>

委托人 Applicant	东莞市质尚品电子科技有限公司 Dongguan IQPower Electronics Co., Ltd.		
委托人地址 Applicant's address	广东省东莞市常平镇九江水石路街2号1号楼1108室 Room 1108, Building 1, No. 2, Jiujiang Shuishi Road Street, Changping Town, Dongguan City, Guangdong Province		
制造商 Manufacturer	东莞市质尚品电子科技有限公司 Dongguan IQPower Electronics Co., Ltd.		
制造商地址 Manufacturer's address	广东省东莞市常平镇九江水石路街2号1号楼1108室 Room 1108, Building 1, No. 2, Jiujiang Shuishi Road Street, Changping Town, Dongguan City, Guangdong Province		
联系电话 Telephone Number	18938229515		
邮件地址 Email address	davis@iqpower.cn		
网址 Website	/		
样品名称 Sample Name	移动电源 Power Bank		
样品型号 Sample Model	PBMGS225		
样品外观 Appearance	橙色近长方体, 尺寸:104.3*69.7*15.2 (mm) Approximate Orange Cuboid, size:104.3*69.7*15.2 (mm)		
商标 Trademark	/		
测试方法和判定标准 Test method and criterion	联合国《试验和标准手册》第八修正版 38.3 章节 United Nations Manual of Tests and Criteria ST/SG/AC.10/11/Rev.8/Subsection 38.3		
样品接收日期 Accepted date	2026.03.26	测试起讫日期 Test date	2026.03.26~2026.04.17
测试项目 Test items	高度模拟、温度试验、振动、冲击、外部短路、撞击/挤压、过度充电、强制放电。 Altitude simulation, Thermal test, Vibration, Shock, External short circuit, Impact/Crush, Overcharge, Forced discharge.		
测试结论 Conclusion	检验结论: Test conclusion: 由东莞市质尚品电子科技有限公司送检的移动电源, 根据联合国《试验和标准手册》第八修正版 38.3 章节进行检测。 The Power Bank submitted for inspection by Dongguan IQPower Electronics Co., Ltd. are tested according to United Nations Manual of Tests and Criteria ST/SG/AC.10/11/Rev.8/Subsection 38.3. 检验结果: 通过 Test result: Pass 签发日期(Issue date): 2026.04.17		
主检 Tested by:		审核 Checked by:	 

参数信息 Parameter information			
移动电源 Power Bank			
型号 Model	PBMGS225	电芯个数 Cells Number	2PCS(1S2P)
额定值 Ratings	3.85V,10000mAh,38.5Wh	质量 Mass	199.96g
技术参数 Technical specification	Capacity: 3.85V, 10000mAh,38.5Wh INPUT1:5V/3A,9V/3A,12V/2.5A,15V/2A (30W max) (USB C) OUTPUT 1:25W/15W/10W/7.5W/5W(Mag Tec Ring) OUTPUT 2:5V/3A,9V/3A,10V/2.25A,12V/2.5A,15V/2A,20V/1.75A (35W max) (USB C) TOTAL OUTPUT:35W max		
电芯 Cell			
型号 Model	586178PH	单电芯额定值 Ratings of single cell	5000mAh,19.25Wh
标称电压 Nominal Voltage	3.85V	电芯形状 Appearance	方形 square
标准充电电流 Standard Charge Current	1A	最大充电电流 Max Charge Current	2.5A
标准放电电流 Standard Discharge Current	1A	最大放电电流 Max Discharge Current	5A
充电限制电压 Limited Charge Voltage	4.4V	放电终止电压 Discharge Cut-off Voltage	3V

序号 No.	测试项目名称 Name of test	标准要求或标准条款号 Standard requirement or the clause number of standard	测试结果 Test result	本项结论 Test conclusion	备注 Remarks
1	高度模拟 Altitude simulation	联合国《试验和标准手册》第八修正版 38.3 章节 United Nations Manual of Tests and Criteria ST/SG/AC.10/11/Rev.8/Subsection 38.3 试验 T.1 Test T.1	见附表 1 See Appendix 1	合格 Passed	/
2	温度试验 Thermal test	联合国《试验和标准手册》第八修正版 38.3 章节 United Nations Manual of Tests and Criteria ST/SG/AC.10/11/Rev.8/Subsection 38.3 试验 T.2 Test T.2	见附表 2 See Appendix 2	合格 Passed	/
3	振动 Vibration	联合国《试验和标准手册》第八修正版 38.3 章节 United Nations Manual of Tests and Criteria ST/SG/AC.10/11/Rev.8/Subsection 38.3 试验 T.3 Test T.3	见附表 3 See Appendix 3	合格 Passed	/
4	冲击 Shock	联合国《试验和标准手册》第八修正版 38.3 章节 United Nations Manual of Tests and Criteria ST/SG/AC.10/11/Rev.8/Subsection 38.3 试验 T.4 Test T.4	见附表 4 See Appendix 4	合格 Passed	/
5	外部短路 External short circuit	联合国《试验和标准手册》第八修正版 38.3 章节 United Nations Manual of Tests and Criteria ST/SG/AC.10/11/Rev.8/Subsection 38.3 试验 T.5 Test T.5	见附表 5 See Appendix 5	合格 Passed	/
6	撞击/挤压 Impact/Crush	联合国《试验和标准手册》第八修正版 38.3 章节 United Nations Manual of Tests and Criteria ST/SG/AC.10/11/Rev.8/Subsection 38.3 试验 T.6 Test T.6	见附表 6 See Appendix 6	合格 Passed	/
7	过度充电 Overcharge	联合国《试验和标准手册》第八修正版 38.3 章节 United Nations Manual of Tests and Criteria ST/SG/AC.10/11/Rev.8/Subsection 38.3 试验 T.7 Test T.7	见附表 7 See Appendix 7	合格 Passed	/
8	强制放电 Forced discharge	联合国《试验和标准手册》第八修正版 38.3 章节 United Nations Manual of Tests and Criteria ST/SG/AC.10/11/Rev.8/Subsection 38.3 试验 T.8 Test T.8	见附表 8 See Appendix 8	合格 Passed	/
测试环境条件 Test environment condition		环境温度: 20°C-25°C; 环境湿度: 45%-75% Ambient temperature: 20°C-25°C; Ambient humidity: 45%-75%			











附表 6  
 Appendix 6

序号 No.	T.6	测试项目名称 Name of Test Items	撞击 Impact	不适用 Not applicable
			挤压 Crush	合格 PASS
样品编号 Sample No	样品状态 Sample status	样品表面最高温度 Max. External Temperature (°C)	测试结果 Test result	备注 Remark
C1	首次 50%容量 1 CYC 50% Capacity	25.1	O	/
C2	首次 50%容量 1 CYC 50% Capacity	24.2	O	/
C3	首次 50%容量 1 CYC 50% Capacity	25.2	O	/
C4	首次 50%容量 1 CYC 50% Capacity	25.2	O	/
C5	首次 50%容量 1 CYC 50% Capacity	25.4	O	/
C6	25 次 50%容量 25 CYC 50% Capacity	24.6	O	/
C7	25 次 50%容量 25 CYC 50% Capacity	25.2	O	/
C8	25 次 50%容量 25 CYC 50% Capacity	25.0	O	/
C9	25 次 50%容量 25 CYC 50% Capacity	25.4	O	/
C10	25 次 50%容量 25 CYC 50% Capacity	24.6	O	/
以下空白				
注: D-解体; F-起火; O-无解体、无起火、外表温度不超过 170°C Note: D-Disassembly, F-Fire, O- No disassembly, no fire, external temperature not exceed 170°C.				




附表 8  
 Appendix 8

序号 No.	T.8	测试项目名称 Name of Test Items	强制放电 Forced discharge
样品编号 Sample No	样品状态 Sample status	测试结果 Test result	备注 Remark
C11	首次完全放电 1 CYC Fully Discharged	O	/
C12	首次完全放电 1 CYC Fully Discharged	O	/
C13	首次完全放电 1 CYC Fully Discharged	O	/
C14	首次完全放电 1 CYC Fully Discharged	O	/
C15	首次完全放电 1 CYC Fully Discharged	O	/
C16	首次完全放电 1 CYC Fully Discharged	O	/
C17	首次完全放电 1 CYC Fully Discharged	O	/
C18	首次完全放电 1 CYC Fully Discharged	O	/
C19	首次完全放电 1 CYC Fully Discharged	O	/
C20	首次完全放电 1 CYC Fully Discharged	O	/
C21	25 次完全放电 25 CYC Fully Discharged	O	/
C22	25 次完全放电 25 CYC Fully Discharged	O	/
C23	25 次完全放电 25 CYC Fully Discharged	O	/
C24	25 次完全放电 25 CYC Fully Discharged	O	/
C25	25 次完全放电 25 CYC Fully Discharged	O	/
C26	25 次完全放电 25 CYC Fully Discharged	O	/
C27	25 次完全放电 25 CYC Fully Discharged	O	/
C28	25 次完全放电 25 CYC Fully Discharged	O	/
C29	25 次完全放电 25 CYC Fully Discharged	O	/
C30	25 次完全放电 25 CYC Fully Discharged	O	/

注: D-解体; F-起火; O-无解体、无起火

Note: D-Disassembly, F-Fire, O- No disassembly, no fire.

### 样品图片 Sample Photo

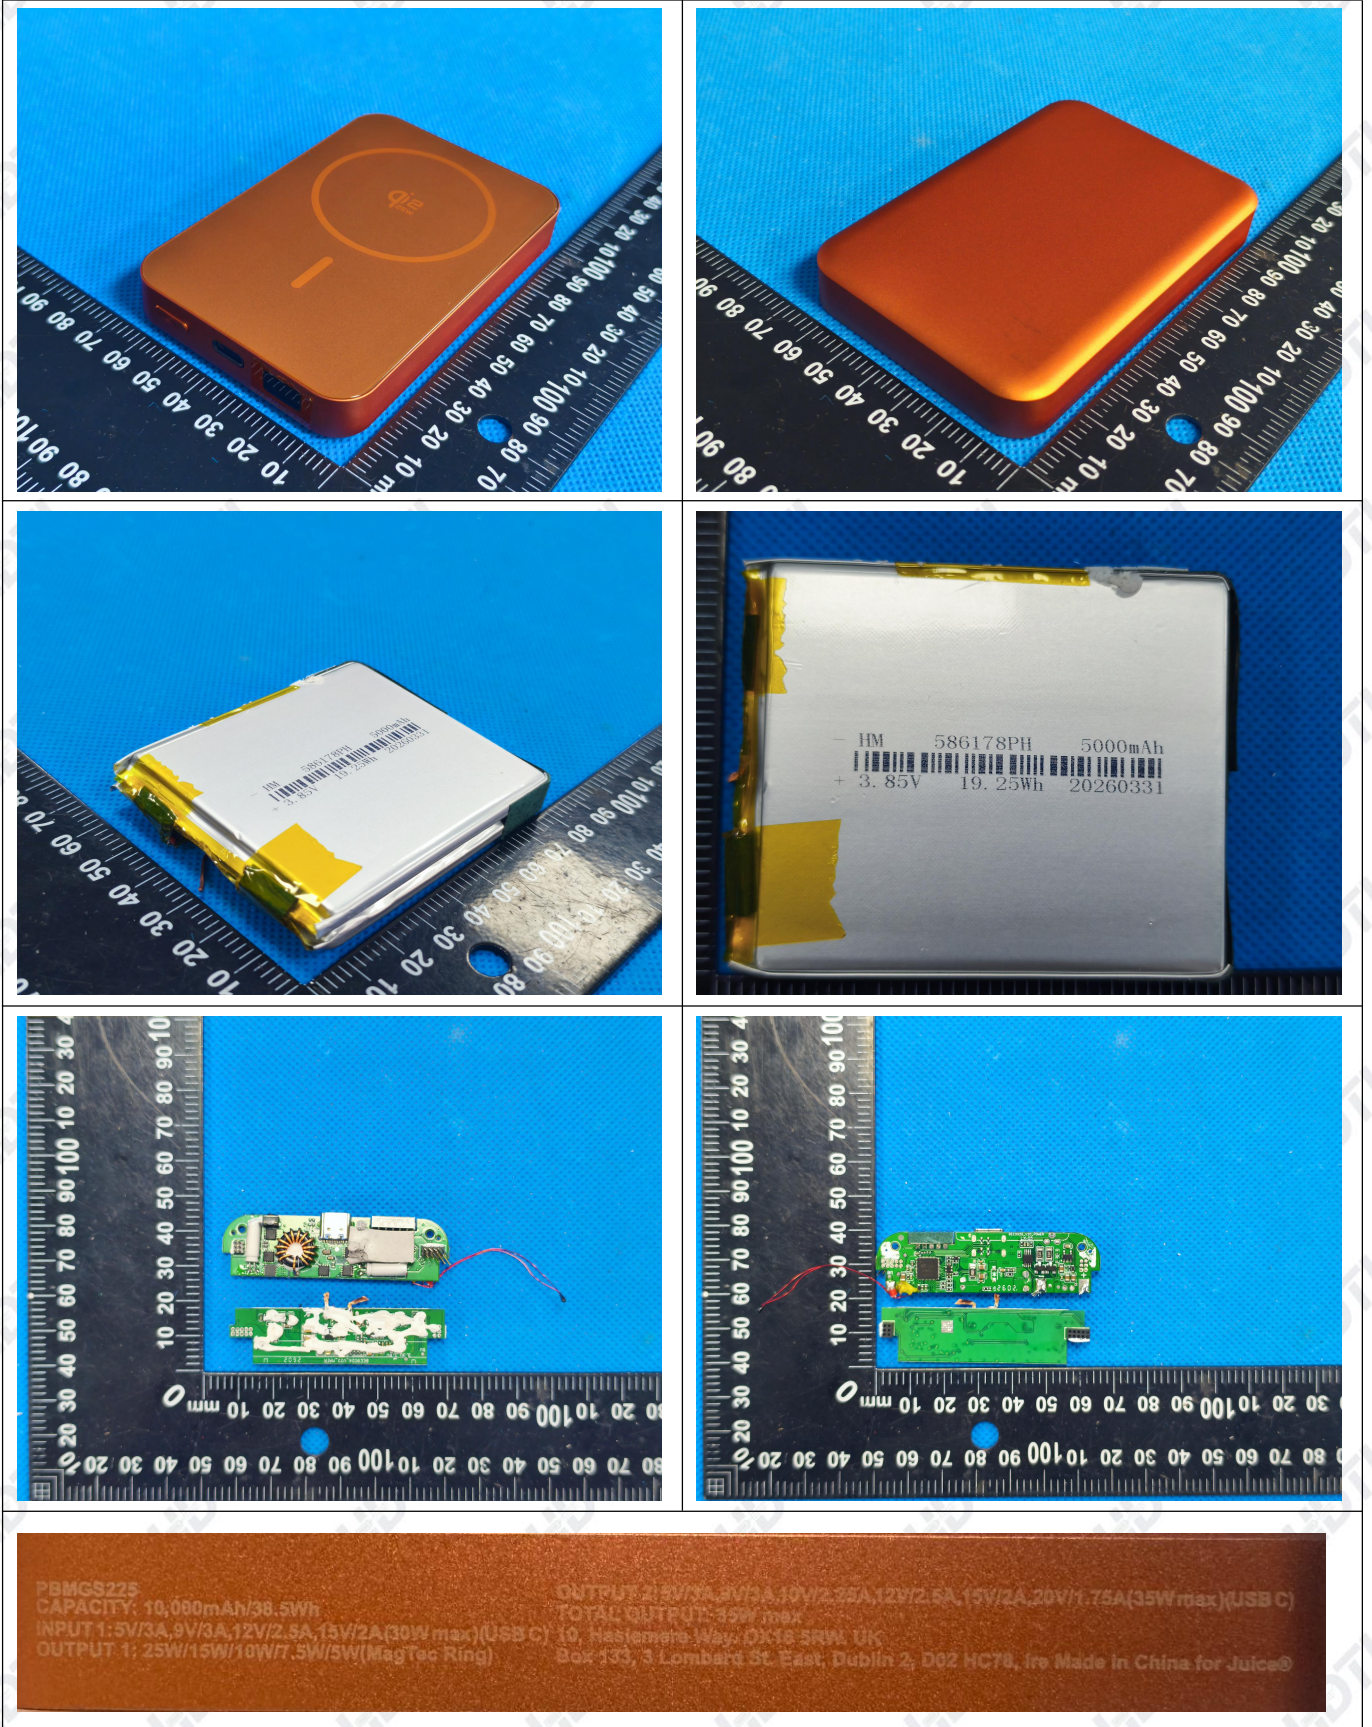

## 注意事项

### Important Notice

1. 本报告书无批准人、审核人、及主检人签名无效。  
The test report is invalid without the signatures of Ratifier, Reviewer and Testing engineer.
2. 未经 HDTL 书面同意, 不得部分地复制本报告书。  
Nobody is allowed to partly photocopy this test report without written permission of HDTL.
3. 私自转让、复制、盗用、冒用、涂改、或以任何媒体形式篡改的报告书无效。
4. The report is invalid w 本报告书无 HDTL 盖章无效。  
hen anything of following happens – illegal transfer, reproduce, embezzlement, imposture, modification or tampering in any media form.
5. 产品信息和客户信息由申请人提供, 我们不对其真实性负责。  
Product information and customer information provided by the applicant, we are not responsible for its authenticity
6. 本报告仅对本次测试样品有效。  
The test report is valid for the tested samples only.
7. 本报告中的中文内容仅供参考。  
The Chinese contents in this report are only for reference.
8. 对报告书若有异议, 应于收到报告之日起 15 天内向本公司提出。  
Objections to the test report must be submitted to HDTL within 15 days.

\*\*\*报告结束\*\*\*

\*\*\*End of report\*\*\*